

Back Massage Cushion with Neck Kneading



User Manual

Model: DF508

Thank you for your purchase of our Back Massage Cushion with Neck Kneading. Please read through the user manual completely before operating your massage cushion. The user manual has the correct methods of usage, cleaning, maintenance and also notes on safety. Please keep this user manual for future reference.

Contents:

Remote Control

Operating Instructions


Product Maintenance

Important Safety Instructions

Specifications

Remote Control:

Remote Control

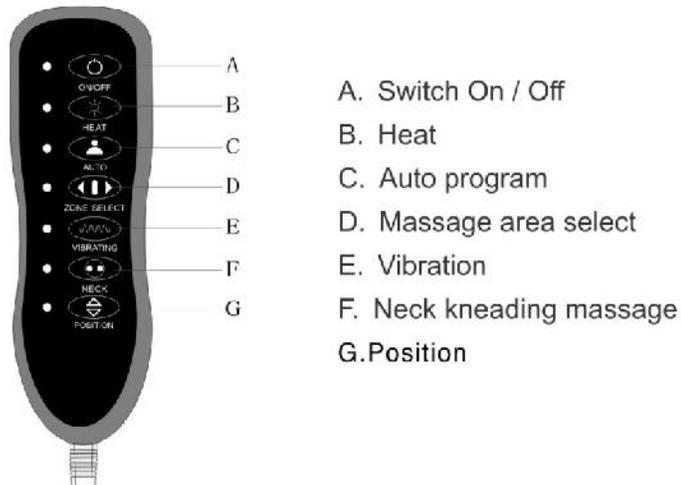

Operating Instructions:

1. This unit has an AC 110V power cord and also a DC 12 volt car adapter. Connect the appropriate power cord to the unit. Connect the electrical power cord to the wall outlet or to your vehicle's cigarette lighter.
2. Position the massage cushion on a seat or chair and use the Velcro strap to secure it to the seat or chair.
3. Press the "On/Off" button to activate the massage cushion. The cushion will default to the Auto program.
4. Press the "HEAT" button, the infrared massage head will light up and start to heat up. Press the "HEAT" button a second time and the heat will be turned off.
5. Press the "Massage Area Select" button, the "Auto" program will change to the "Manual" program. You can cycle through the manual massage programs by pressing the "Massage Area Select" button.
 - The Green indicator light indicates the "Upper" massage program.
 - The Red indicator light indicates the "Lower" massage program.
 - The Orange indicator light indicates the "Full Back" massage program.
6. Press the "Auto" program button when the manual program is in process and this will change back to the automatic program.
7. Press the "Vibration" button, the seat vibration massage will be activated. Press the "Vibration" button again and the vibration massage will turn off.

8. Press the "Neck Kneading" button, the neck kneading massage head will be activated. Press the "Neck Kneading" button again and the neck kneading massage will turn off.

Product maintenance:

1. This product contains moving parts for the back and neck massage. A mechanical sound will be heard when the unit is in operation which is perfectly normal. Also, if the seat vibration is activated, then a low humming sound is normal.

2. If the mechanical sound is too loud while the massage is in operation, it may be working too long. Please stop the unit for 15 minutes and then restart the unit and check if the noise is now normal.

3. If the unit turns off during the massage, it may be the automatic timer has counted down and shut off or it may be the over-heating protection switch. If the over-heating protection switch was activated, then it is recommended to let the unit cool for 1 hour before using again. Turn off the power and let it sit one hour before operating it again.

Important Safety Instructions:

1. It is recommended that each person does not use the unit more than 30 minutes at a time and only 1 hour per day.

2. Consult with your doctor before using the unit if you have any health issues or concerns.

3. Only use the unit when someone is sitting on it. Do not run the unit by itself.

4. This unit is not recommended for children.

5. The unit has moving parts and the user should have light clothing on when in operation.

6. Keep the unit away from wet areas or moisture. Do not operate the unit with wet hands or if you are wet or your clothing is wet to avoid electric shock.

7. Stop using the unit immediately if you feel any discomfort or pain.

Specifications:

Product Name: Back Massage Cushion with Neck Kneading

Model: DF-508

Power Input: AC 110V or DC 12V

Frequency: 48W

Massage Rated: 20 minutes